



Good to know before using your Wumby wipe warmer.

The Wumby wipe warmer helps parents and babies with more relaxed, hassle-free diaper changes. The Wumby wipe warmer product uses top heating. Plug it in and the first 6 to 8 wipes are always at your desired temperature (between 40 and 55 degrees Celsius).

Product overview

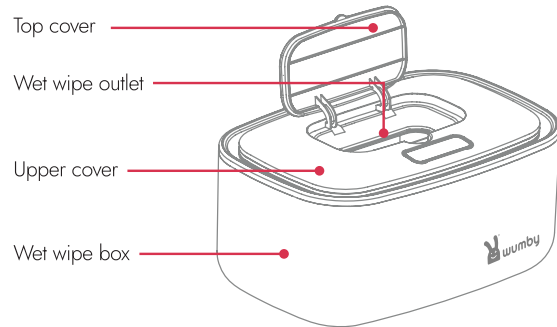

1

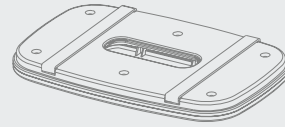


Open a pack of wet wipes, pull out a wipe and insert it into the wipe outlet. Secure the wipes in the top cover with silicone straps.

2




Place the top cover loaded with the wipes into the box (with the notched part facing backwards).

3

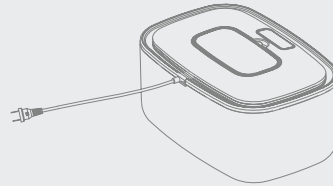

Insert the power cord plug into the socket, tap the power switch button on the control panel and set the temperature by pressing the '+' button to cycle between 40 and 55 degrees Celsius.

4

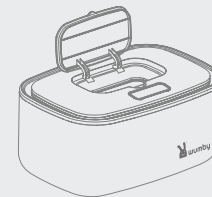

Before use, heat for about an hour. To use, open the top cover and pull out wet wipes. After use, close the top cover.

Features

- The top heating design prevents wet wipes from drying out.
- Wipes are easy to withdraw: even with the top cover closed, wet wipes can be extracted easily.
- This helps provide for long-lasting moisture retention.
- The 10W heating element provides for an extremely low energy consumption of 0,01kWh.
- Quick heating: the wipes reach your chosen temperature setting within one hour.
- The temperature can be adjusted between 40 and 55 degrees Celsius.
- Anti-bacterial surface treatment.

Tips

- When the wipe warmer is switched on, do not touch the heating element (bottom of the upper cover): this may cause low-temperature burns.
- When not in use for more than 24 hours, please switch off and unplug the Wumby wipe warmer.
- Please use only wet wipes, do not use regular toilet paper or facial tissues.
- The Wumby wipe warmer can also be used as a regular tissue box when it is not plugged in.



Scan this QR code for manuals in other languages



Precautions

- Please clean the Wumby wipe warmer regularly.
- Before cleaning the Wumby wipe warmer, please unplug the power cord and wait for it to cool down.
- Wipe both inner and outer sides of the Wumby wipe warmer with a clean and damp towel. Never use corrosive liquids for cleaning.
- Please do not immerse the entire Wumby wipe warmer in water to clean it, as this may cause water ingress into this electrical appliance, resulting in malfunctions and affecting safe use.
- Please unplug the power when not in use.
- Place the Wumby wipe warmer out of reach of young children.
- Do not use the Wumby wipe warmer in direct sunlight, next to hot objects, or near sources of ignition.
- The temperature of the heated part will be higher than the set temperature for the wipes so please be careful when using it and do not touch the heating element as there is a possibility of low temperature burns.
- The user must strictly comply with these precautions about use and operation of this product. In case of any accidents caused by improper use, our company will assume no liabilities.
- If the Wumby wipe warmer is not going to be used for a long time, wipe the Wumby wipe warmer clean and put it into the original packaging.

Model WUM-WWW

Rated voltage/frequency	: 20V ~ 50hz	Power	: 10W
Wet wipe size	: ≤170 × 100 × 80mm	Temperature range	: 40 - 55° (adjustable)
Capacity	: 120 pieces of thick wet wipes	Display design	: Digital temperature display

Wumby
P.O. box 4874
4803 EW BREDA
The Netherlands

E-mail: info@wumby.nl
Web: www.wumby.nl
Instagram: @wumbyNL

Contact us directly via Whatsapp



Manual Wumby wipe warmer

